

IP65 / CE/ RoHS

Temp. / Humi. / Dew Point Transmitter

溫、濕度、露點信號傳送器

User's Guide

使用說明書

**TRH-6200**




適用於戶外環境監控

Suitable for outdoor environmental monitoring

## ■ TRH-6200 安裝方式 / Mounting the TRH-6200:


### A. 安裝於柱子或牆壁上:

先將 L 板固定於欲安裝之柱子或牆面，  
再依右方圖示將 TRH-6200 固定於 L 板上。  
請確保 TRH-6200 被牢固的安裝於 L 板上。

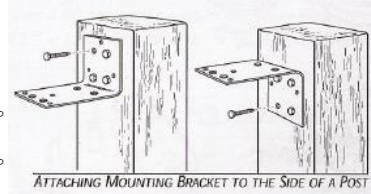

### A. Mounting on the Side of a Post or Wall:

Attaching the mounting bracket to the mounting surface in the desired location.  
Secure the mounting bracket to the TRH-6200.  
Tighten until the mounting bracket is firmly attached to the TRH-6200.

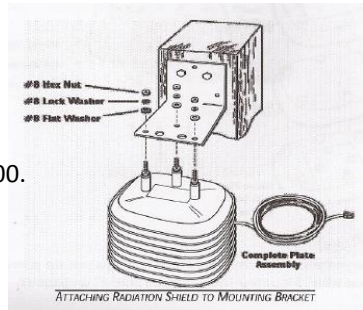


### B. 安裝於傳感器安裝支架

將 TRH-6200 頂部的螺柱突出部份插入傳感器支架上對應的孔徑，以配件中的螺絲固定。請確保 TRH-6200 被牢固的安裝於傳感器安裝架。


### B. Mounting on the Sensor Mounting Arm

Slide the stud ends protruding from the top of the TRH-6200 assembly into the holes on the Sensor Mounting Arm. Secure the TRH-6200 to the Sensor Mounting Arm.  
Tighten until the mounting bracket is firmly

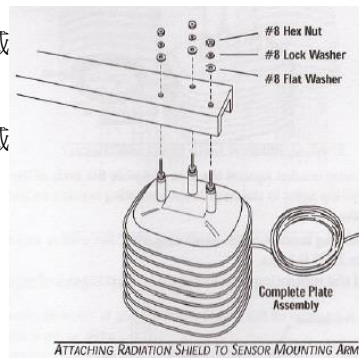

### C. 安裝於管子

將TRH-6200安裝於L板上，以配件中的U形螺絲固定於欲安裝之管子上，請確保TRH-6200被牢固的安裝於管子上。

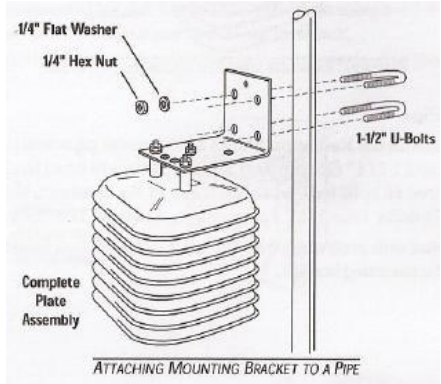


### C. Mounting on a Pipe

Hold the mounting bracket against the pipe and slide the ends of the two 1 1/2' U-bolts through the holes in the back of the mounting bracket so that the U-bolts wrap around the pipe. Secure the TRH-6200 to the pipe. Tighten until the mounting bracket is firmly attached to the pipe.

### D. 安裝於柱體頂端

將TRH-6200裝置於L板上，再將儀器裝置到柱體頂端。請確保TRH-6200被牢固的安裝於柱體頂端。

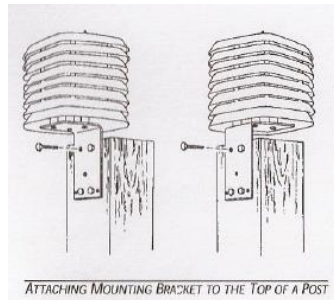

### D. Mounting on Top of a Post

Mounting the TRH-6200 (with mounting bracket already attached) to the mounting surface in the desired location.