IP65 / CE/ RoHS


# **Temperature Transmitter**

溫、濕度信號傳<mark>送</mark>器

User's Guide

**TRH-3200** 

使用說明書

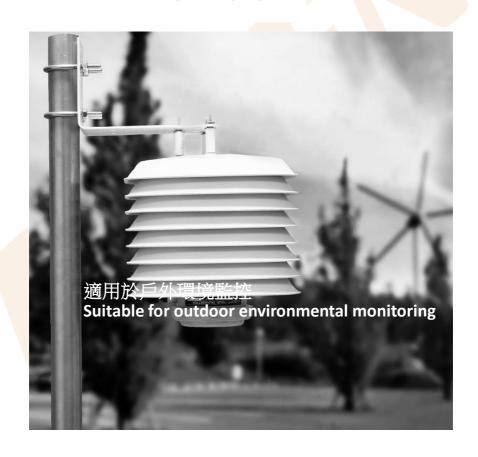

# ■TRH-3200 安裝方式 / Mounting the TRH-3200:

### A. 安裝於柱子或牆壁上:

先將 L 板固定於欲安裝之柱子或牆面, 再依右方圖示將 TRH-3200 固定於 L 板上。 請確保 TRH-3200 被牢固的安裝於 L 板上。




## A. Mounting on the Side of a Post or Wall:

Attaching the mounting bracket to the mounting surface in the desired location.

Secure the mounting bracket to the TRH-3200.

Tighten until the mounting bracket is firmly attached to the TRH-3200.

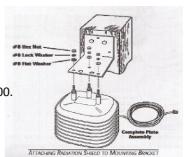


## B. 安裝於傳感器安裝支架

將 TRH-3200 頂部的螺柱突出部份插入傳感器支架上對應的孔徑,以配件中的螺絲固定。請確保 TRH-3200 被牢固的安裝於傳感器安裝架。

# B. Mounting on the Sensor Mounting Arm

Slide the stud ends protruding from the top of the TRH-3200 assembly into the holes on the Sensor Mounting Arm. Secure the TRH-3200 to the Sensor Mounting Arm.

Tighten until the mounting bracket is firmly

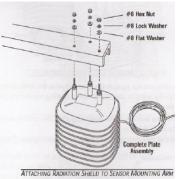


### C. 安裝於管子


將TRH-3200安裝於L板上,以配件中的 U形螺絲固定於欲安裝之管子上,請確 保TRH-3200被牢固的安裝於管子上。

#### C. Mounting on a Pipe

Hold the mounting bracket against the pipe and slide the ends of the two 1 1/2. U-bolts trough the holes in the back of the mounting bracket so that the U-bolts



Tighten until the mounting bracket is firmly attached to the pipe.

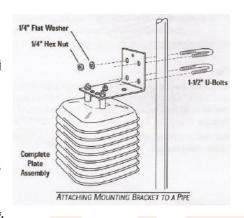

## D. 安裝於柱體頂端

將TRH-3200裝置於L板上,再將儀器 裝置到柱體頂端。請確保TRH-3200被 牢固的安裝於柱體頂端。

## D. Mounting on Top of a Post

Mounting the TRH-3200 (with mounting bracket already attached) to the mounting surface in the desired location.

